

# Go!Control

HOW TO ARM IN AWAY MODE

# Arming Away Mode

- ▶ The Away Mode is used when the customer is away from the home and wants to have their entire system activated.
- ▶ To arm the Go!Control Panel, follow these simple steps...

# Arming Away Mode

## 1. Select **Security**



# Arming Away Mode

2. Select **Arm**.



# Arming Away Mode

3. Select **Away**.

